

CENIX
www.cenix.co.kr

USER'S MANUAL

VR-PCM880, VR-N980
S-70, A-70 Series



Digital Recorder



Made in Korea

Cautions

► Cautions in Operating ◀

- Do not drop the product and give it a shock. It could cause troubles.
- Do not place the product at the following condition and/or places :
 - Where it is full of high temperature above 60 degrees.
 - At a dusty place.
 - Near the heaters or from any type of heat sources.
 - In a car with windows closed, especially in summer.
 - At a heavy damp place like a bathroom
- Any excessive force on the LCD display could cause damages to it and to overall LCD functions.
- A magnetic card such as a credit card or a subway commutation ticket may not be working any longer once it is placed on or close to the speaker.
- The seller holds no liability for any damages caused by misuse of the product and any claims from the third party.
- The seller holds no liability for any lost messages which are caused by repair or any other troubles.

► Cautions in Using Battery ◀

- Do not have a short circuit, disassemble, heat or put battery in the fire. And do harm to your eyes, also could cause fever and the rupture of a doctor.
- Do not use different kind of battery.
- Take the battery off when you don't use for a long time.

► Cautions for Safety ◀

- Take battery off when there are malfunction caused by smoke and heat.
- Do not use in the place where electronic product's operation is prohibited like inside of airplane.
- Do not use in driving and walking, since any accident could be happened.

 
INDEX

■ Feature	2
■ Name of each part	3
■ LCD part	4
■ Before Using	5
Installing Batteries	5
Battery life time	5
Power On/Off	5
Pc connecting	6
Connecting with an external appliance	8
■ Operating Voice Recorder	9
Button Functions	9
Recording Messages	9
Playing back Messages	10
Erasing Messages	10
Hearing aid function	12
Setting the Menu	13
Convenient recording function	14
Convenient playback function	15
Telephone Recording	17
■ Cautions	19
■ Specification	20

Feature


- **COMPACT SIZE**
lets you easily carry with its slim and portable size.
- **FLASH MEMORY**
retains all data even without power.
- **AUTOMATIC POWER OFF**
automatically turns off the power if you do not press any button.
- **REMAINING RECORDING TIME DISPLAY**
displays Recording time & Remaining time.
- **RECORDING MODE**
lets you record with selected recording mode among PCM, HQ, SP and LP.
- **LONG TIME RECORDING**
records long time message on SP or LP mode.
- **VOS(Voice Operated recording System)**
records a message only with voice and other actual sound.
- **REPEAT PLAY**
plays a part of each message successively.
- **SCAN PLAY**
plays only fore 5 seconds of each message successively.
- **EXTERNAL In/Out CONNECTION**
lets you record with another appliances mutually.
- **HEARING AID FUNCTION**
lets you hear amplified voice on the Hearing Aid Mode.
- **Managing Folder and File**
Max. 100 messages can be contained in each divided A, B, C, and D folder.
Totally Max. 400 recording files can be contained.

Name of each part

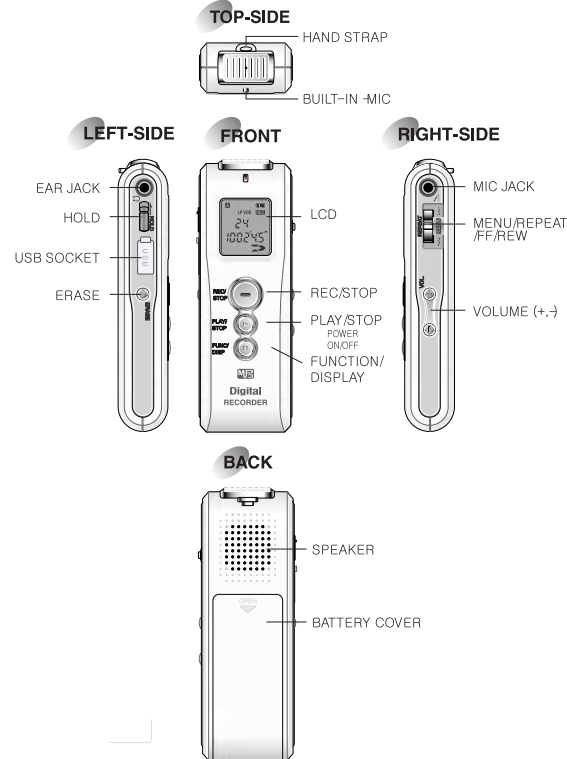

LCD part

 ■ LCD PART


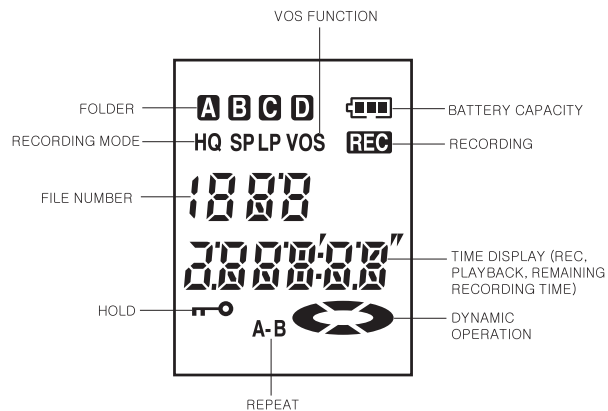


Before Using

■ INSTALLING BATTERIES

Installing and replacing batteries should be done at stop position.

  1. Open the battery cover and place 2 AAA typed alkaline batteries in the compartment and then replace the cover.

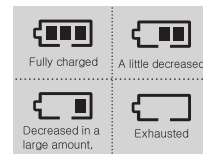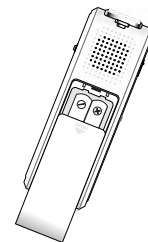

(Battery Type : AAA or LR03 or UM-4 or equivalent)

■ Battery life time ("AAA" ALKALINE)

Battery	At recording mode	At speaker playback (VOL.10)	At earphone playback (VOL.10)
"AAA" Alkaline	SP,LP: 15 hours 30min HQ: 15 hours	SP,LP: 9 hours HQ: 9 hours	SP,LP: 20 hours HQ: 20 hours

※ Different Battery type and Volume level can cause different Battery Life Time

♣ Using battery

1. For managing battery lifetime efficiently, the unit will be automatically tuned off if you do not press any button for more than 1 minute.
2. Please let HOLD switch ON position when you don't use the unit.


■ Power On/Off

To power on, press the PLAY/STOP (▶) or REC/STOP (▶) button longer. If the unit is not operated longer than 1 minute, it will be automatically turned off. To power off, press the PLAY/STOP (▶) button longer than 2 sec.

Before Using

■ PC CONNECTING

1. Connect the USB cable to the PC. Then, connect the other side of the USB cable to the product,
2. If it works properly, you can find the portable disk created in MY COMPUTER folder.

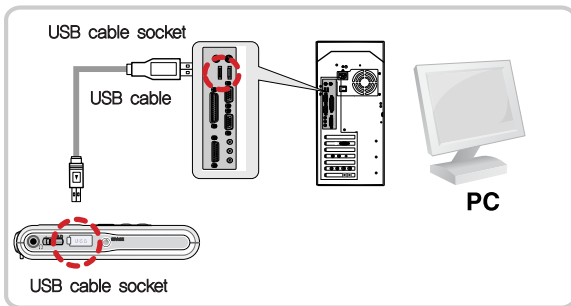

ⓘ Note

- ▶ When connecting to the PC with a USB cable, the "PC LINK" message is displayed on the LCD screen.



- ▶ The PC system should meet the following requirement.
 - Pentium 200MHz or better
 - Windows 2000/ XP or later
 - USB port (2.0) support
 - DirectX 9.0 or later

Before Using



<Caution>

- When new messages are recorded after deleting the existing files, be careful with the file arrangement, especially the file number.

Ex) Display on the LCD | File name on the PC

01	000-Voice.mp3
02	001-Voice.mp3
03	002-Voice.mp3
04	003-Voice.mp3
05	004-Voice.mp3
06	005-Voice.mp3
⋮	⋮

 
→ In case two files are deleted

- ▶ For example, when a new message is recorded after deleting the existing two files (001-Voice.mp3, 002-Voice.mp3) as you can see above, its file name starts from 006-Voice.mp3

■ CONNECTING WITH EXTERNAL APPLIANCE

1. Recording with external microphone

If you connect external microphone into MIC JACK, built-in mic will be excluded and you can record with optional external microphone. (You can clip external microphone onto your lapel, so that you can take free action. Also, you can record with much better sound quality by approaching sound source.)

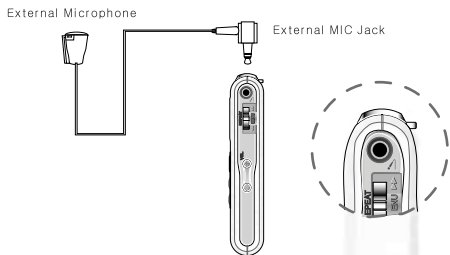


VOICE RECORDER

■ Button Functions

- PLAY/STOP (▶/⏸) : Plays and Stops a message playing back.
- FUNC/DISP (⏏) : Selects Function and Display condition.
- REC/STOP (⏻) : Records and Stops a message recording.
- MENU/REPEAT (⏮) : Selects MENU, SEARCH, REPEAT, FF, REW function.
- VOLUME (⊕/⊖) +, -: Controls a volume.
- ERASE (⊗) : Erases recorded messages.
- HOLD (⏻) : Prevents mis-operation by setting Hold mode.

■ Recording Messages

 1. Slide HOLD (⏻) button to OFF position and press one button among PLAY/STOP (▶/⏸), REC/STOP (⏻) so that the unit gets POWER ON.
(Press REC (⏻) button for more than 1 second on the waiting mode, the recording will also start.)
2. Let MIC toward sound source and press REC/STOP (⏻) button.
Recording File will be added and recording will be continued.

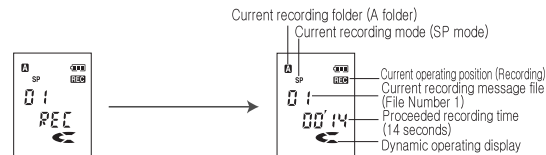


3. To stop recording, press REC/STOP (⏻) button one more time.
- ♣ Press PLAY/STOP (▶/⏸) button after recording, the last recording file will be played.
 - ♣ Do test recording in advance to prevent from failing recording.

VOICE RECORDER

VOICE RECORDER

Operating Recorder

 - ♣ If MEMORY is exhausted or file number gets more than 100 messages in one folder, "FULL" will be displayed and recording won't be continued.

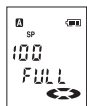

Messages get 100 in one folder.



Memory is exhausted with 2 message files

- ♣ VOLUME level won't be adjusted during recording.

■ Playing back Messages

1. Let HOLD () button OFF position and press one button among PLAY/STOP (), REC/STOP () so that the unit gets POWER ON.
2. Select FILE number with \uparrow/\downarrow jog key.
(Press PLAY/STOP () button for more than 1 second on the waiting mode, the playing back will also start.)
3. Press PLAY/STOP () button for playback until to the last recording file.
4. Adjust VOLUME level with VOLUME () () button.
5. To stop playing back, press PLAY/STOP () button one more time.



- ♣ During playing back messages, MENU won't be operated.

■ Erasing Messages

<Erasing a single message>

Select a file with \uparrow/\downarrow jog button. Pres the ERASE () button longer than 3 seconds. When the "ERASE" sign is blinking on the LCD, press the ERASE () button shortly once again. Then the file will be deleted and the following File No. will be changed as a current File No.

- ※ When the "ERASE" sign is blinking, the fore part of the file will be played for 10 seconds to be sure.

Operating Recorder



<Erasing all messages in a FOLDER>

1. Select a folder to erase with MENU () and \uparrow/\downarrow jog key.
2. With the ERASE () button pressed in the stop mode, press the REC/STOP () button longer than 2 seconds. When "ALL ERASE" is blinking on the LCD, press only the ERASE () button shortly once again so that all messages in the selected folder will be deleted.



<FORMAT>

1. With the ERASE () button pressed in the stop mode, press the REC/STOP () button longer than 5 seconds. When "ALL ERASE" sign changes to the blinking "ALL CLEAR" sign, press only the ERASE () button shortly once again so that all data files in the A, B, C, and D folder will be deleted.





 
An erased message can't be restored.

At FORMAT mode, all data even including locked file will be erased.

Operating Recorder



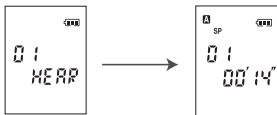



■ Hearing Aid Function

1. Changing to Hearing Aid mode
 - Press FUNC/DISPLAY () button shortly at stop position so that the unit will be changed to the Hearing Aid Mode.
 - EARPHONE will be used as a Hearing Aid by inserting earphone into EAR terminal of the unit.
2. Canceling Hearing Aid Mode.
 - To cancel the Hearing Aid Mode, press FUNC/DISP () button shortly once.




3. Recording is not available on the Hearing Aid Mode.

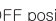■ Setting the Menu

1. Slide HOLD () button to OFF position and press PLAY/STOP (), REC/STOP () button longer. The unit will be powered on.
2. Press MENU () button shortly. MENU will be displayed FOLDER→RECORD MODE→VOS→MIC→LED. Each MENU () button pressing converts the mode and you can select any mode with  key.



 ● Select Folder

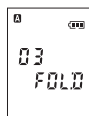Max. 100 files can be contained in each divided A, B, C, and D folder. Press MENU () button shortly once to convert into the FOLDER MODE and select any of them with  key.

 


Operating Recorder

● Select Recording Mode

In the stop mode, press MENU () button shortly twice on the FOLDER MODE to convert into Recording Mode and select PCM, HQ, SP, LP with  jog key.

- PCM mode : Original Sound recording mode
- HQ mode : High quality recording mode
- SP mode : Normal quality recording mode
- LP mode : Long time recording mode

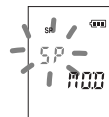



● Select VOS (Voice Operated Recording System)

Recording will be proceeded only with voice and other actual sound. Press MENU () button shortly three times in the stop mode to convert into VOS MODE and select ON, OFF with  jog key.





● Select of MIC sensitivity

1. Press MENU button () 3 times at STOP status.
2. Select "HI" or "LO" at MIC SENS mode with  jog key.
3. Press Menu button to confirm.
 - MIC LOW : a noisy place
 - MIC HI : silent place



● Select LED On/Off




1. Press MENU button () 3 times at STOP status.
2. Select "ON" or "OFF" at LED mode with  jog key.
3. Press Menu button to confirm.
 - LED ON : Turn ON the Record LED
 - LED OFF : Turn OFF the Record LED




Operating Recorder

■ Convenient Recording Function

<PAUSE>

Press FUNC/DISP () button during recording, recording will be paused.
Press FUNC/DISP () button once again or REC/STOP () button, PAUSE will be released.

<DISPLAY FUNCTION>

Press FUNC/DISP () button longer than 2 seconds, and then REMAIN TIME will be displayed.

<REC MONITOR>

During recording, you can monitor recording message by inserting earphone into earphone jack.

<INDEX ADDITION>

Slide up  jog key during mode, FILE number will be added and recording will be continued.


<VOS>

Recording will be proceeded only with voice and other actual sound.

Operating Recorder

■ CONVENIENT PLAYBACK FUNCTION

<Volume Adjustment>

Controls volume level from 0 to 30 with VOLUME () () button on playing back mode.




<PAUSE>

Press FUNC/DISP () button during PLAYBACK, PLAYBACK will be paused.
Press FUNC/DISP () or PLAY/STOP () button PAUSE will be released.




<DISPLAY FUNCTION>

Press FUNC/DISP () button for more than 1 second during PLAYBACK, REMAIN TIME will be displayed.




Operating Recorder

<SCAN PLAY>

Press FUNC/DISP () button for more than 1 second on stop mode, the fore part of each file in current folder will be played for 5 seconds in order.



<A-B SECTION REPEAT>

Press MENU () button one time shortly during PLAYBACK mode. Point A will be selected. And please press MENU button one more time. Point B will be selected. And then A-B section will be played repeatedly.



<NOISE FILTERING>

Press REC button () shortly during PLAY BACK, noise filtering mode.





- 1) LCF : Get rid of noise
2) VOICE : Make sounds louder
3) NOR : Original sound

Operating Recorder

 
<PLAYBACK SPEED CONTROL>

Can adjust the playback speed during playing.

1. long press MENU BUTTON ()
2. FF/REW BUTTON () changes speed(70% ~120%)



■ Telephone Recording

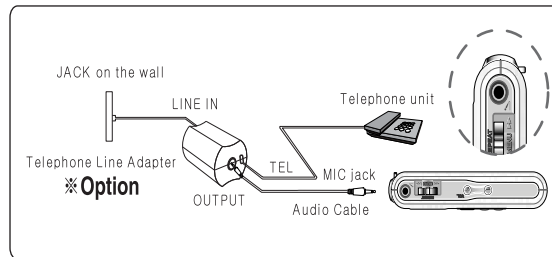


 Not available for Digital Telephone and the telephone with different MODULAR JACK.

Operating Recorder

2. In case of recording from external appliance into VR unit(audio cable 1)
Connect optional audio cable into both EARPHONE of external appliance and MIC of unit and press REC button. (Recording will be proceeded with L-ch mono and you can check recording condition with earphone.)

 3. In case of recording from VR unit into external appliance(audio cable 2)
Connect optional audio cable into both EAR of VR unit and MIC or external INPUT of external appliance and press both PLAY/STOP () button of VR unit and press REC button of external appliance. (Do test-recording in advance and you can't adjust volume level with VOLUME button of the voice recorder unit.)

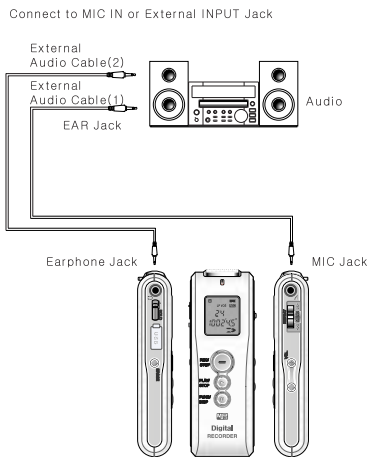

Cautions

- Check following articles first if you find any malfunctional matter.
- In case of no LCD display
Check1 Did you check the battery capacity? ➡ Replace batteries.
Check2 Are both polarities of the battery loading in right Way? ➡ Load batteries in each right +/- position.
- In case of no recording
Check1 Isn't it at Hold position? ➡ Set Hold switch off.
Check2 Isn't the message number or file FULL? ➡ Erase unnecessary message.
Check3 Did you check the battery capacity? ➡ Replace batteries.
- In case of no Playback
Check1 Isn't it at Hold position? ➡ Set Hold switch off.
Check2 Isn't there any recorded message? ➡ Check the recording message.
Check3 Did you check the battery capacity? ➡ Replace batteries.
- In case of no sound from speaker
Check1 Isn't your VOLUME at 0 (Zero) position? ➡ Adjust the VOLUME button.
Check2 Isn't your Earphone inserted in? ➡ Take the Earphone Jack OFF.
- In case of no sound from Earphone
Check1 Isn't your VOLUME at 0 (Zero) position? ➡ Adjust the VOLUME
Check2 Is your Earphone properly inserted in? ➡ Insert the Earphone Jack completely.

Specification

- For improvement of product, specifications & design can be changed without previous notice

ITEM	SPECIFICATION
Model Number	VR-880/N980/A-7-/S-70(4GB)
Recording Time (PCM)Mode	24H
Recording Time (HQ)Mode	131H
Recording Time (SP)Mode	527H
Recording Time (LP)Mode	1055H
Voice(A,B,C,D)	4 Folders x100 Files
Output Power Speaker	150mW
Ext Mic./Line In	Built in MIC & 3.5 \emptyset Mono Jack
Output Power Earphone	Built in Speaker & 3.5 \emptyset Mono Jack
Speaker	Dynamic 20mm, 8 Ohm
Dimension	31(W)X90(H)X16(D)mm
Weight	34g Without Battery
Storage Media	Built in Flash Memory
Power Source	DC 3V, "AAA" Alkaline x 2pcs
Battery life time	Over than 24 hours
Operating Temperature	0°C~40°C