


# WIRING DIAGRAM FOR A-CUBE PHONE RECORDER

1. Parallel Cable as shown in "Red Colour" is to be installed by Customer

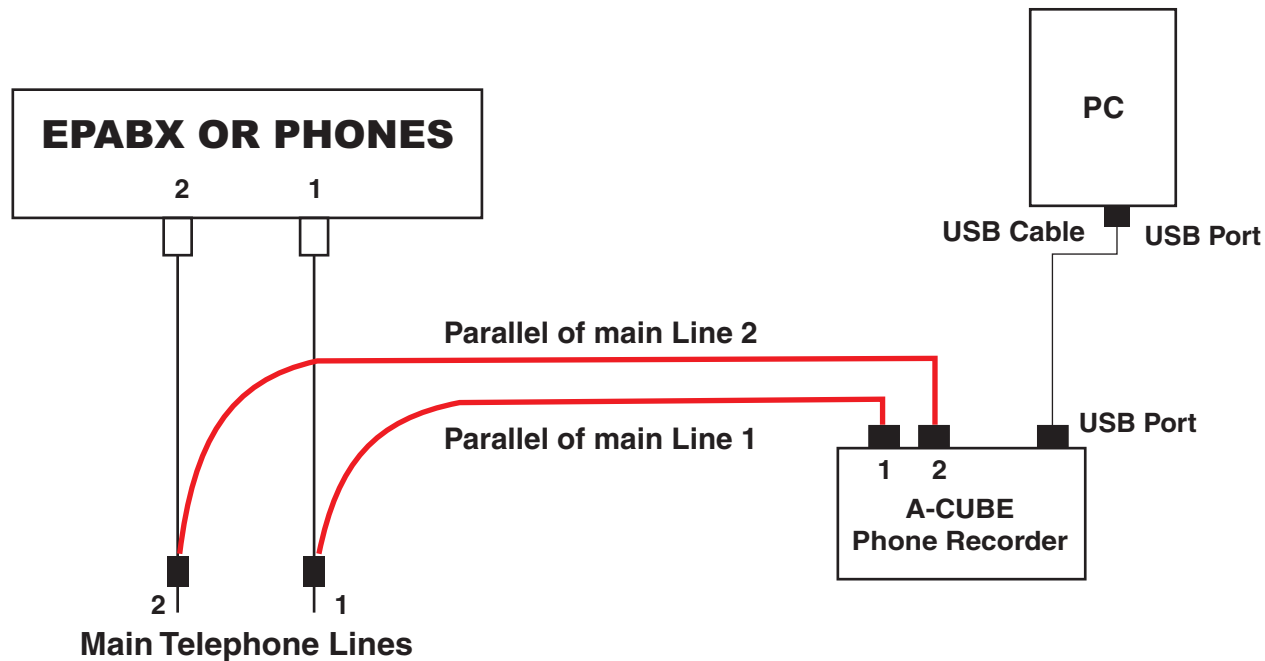

Each Parallel Cable should have RJ - 11/Telephone Connector at Recorder end.

The above example shows 2 lines. Same Wiring Procedure is applicable for 4/8 16 /32 line Recorders

In case of PRI lines. The Parallel lines may be obtained from the Extension MDF